


## Introductory Notes for the Epson BrightLink485wi Interactive Projector

Observe the cable connections. Locate Remote Control and Interactive Styli

Locate Remote Control functions for On/Off, AV Mute and for Freeze, among others.

Turn on Computer and Projector

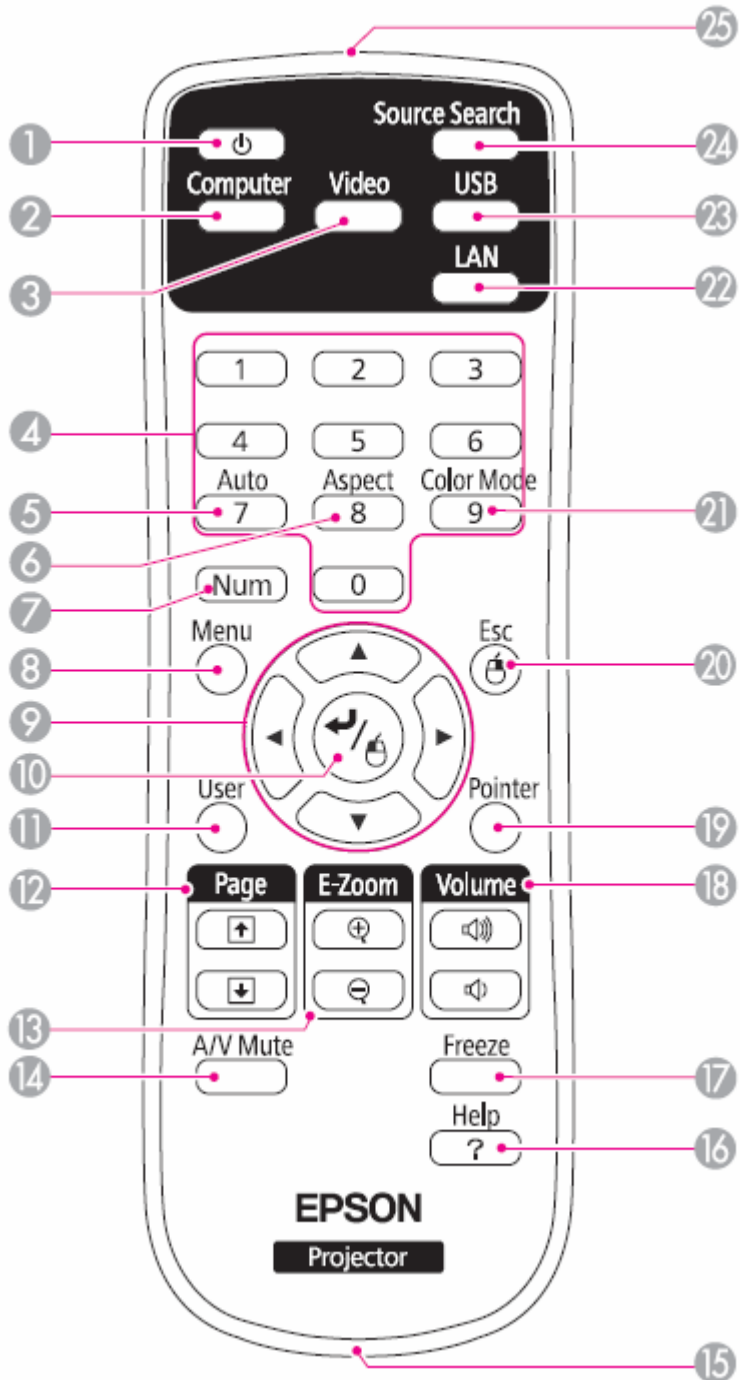

### Buttons on Remote Control

- 1. Power On/Off**
2. Computer (1 or 2)
3. Video (S-Video, Video, HDMI)
4. Numbers for Password
5. Auto
6. Aspect
7. Num (used with Numbers)
8. Menu (e.g. Settings - Power – Normal or Eco)
9. Arrows (for Menu ...or as a 'PowerPoint Clicker')
10. Enter OK
11. User (defaults to **AutoCalibration**)
12. Page (for PowerPoint)
13. E-Zoom
- 14. A/V Mute**
15. Strap Attach
16. Help
- 17. Freeze**
18. Volume
19. Pointer on-screen
20. Escape
21. Color (Bright Room etc.)
22. Lan image(s)
23. USB
24. Source
25. Light Emitted

For more explanations of the hardware functions, see pp 16-18 of 165-page EpsonUsersGuide.pdf

(attached and also downloadable from

<http://download.epson.com.sg/manuals/UsersGuide%20Denmark%20Series.pdf>)

## Using the Epson Stylus as a Mouse

The Driver for **Easy Interactive Tools** (EIT) is already installed and active. You don't need to start any special software – just use the computer (i.e. its projected screen) as normal

- Click anywhere on the board to see the Pointer follow the Stylus
- Use the Right-Click button on the Stylus (just to show the Desktop Settings Menu ...but no need to change anything here)
- Use the Stylus to open Web ...a 'tap' is the same effect as a left-click
- Choose a site relevant to Subject(s)
- Choose a Document (such as Exam PDF) relevant to Subject(s)
- Scroll with Stylus, follow hyperlinks with Stylus
- Slide Stylus over some Text in order to 'highlight' then choose Edit ...Copy (may have to use right-click mode for this). Equally, one may then paste content into, for example, Word, PowerPoint or Excel.

## Using the Epson Stylus as a Pen

*Start the EIT software (using the shortcut on the Desktop) – for full details of 'icons' see below. This is the main 'floating' toolbar*



With a PDF or Website open to full screen, and switching to Pen Mode in the EIT Panel, use

- Pen and Highlighter
- The Capture-Camera (in Tools) to capture the annotated screen
- (Save as a single-screen Desktop Capture)

Switch back to Mouse/Interactive/Desktop Mode ...and make sure that you have clicked on the Mouse icon; Scroll up/down, visit another site and/or document; Back into Pen/Annotation Mode and note that previous annotations have to be cleared

### **Using the Epson Styles to launch the Keyboard**

In Mouse/Interactive/Desktop Mode, open a Document or Spreadsheet and use

- The 'Virtual Keyboard'

### **Using the Epson Software to assist the view of the screen**

Still in Mouse/Interactive/Desktop Mode, open a Document, Website or Spreadsheet and use

- The Shade
- The Spotlight tools
- The Magnifier

### **Using the Epson Software to create an "Interactive Whiteboard Canvas"**

Switch over to Whiteboard Mode

- Pen can be used to write as on a blackboard or dry-erase whiteboard
- Create a new page, with new Pen content, and in different colours/widths
- Use the Eraser(s) and/or the Clear All and/or Delete Page
- Add another Page and observe the Page Listing
- Change the colour of the Background and/or use an image as a Background
- Save the 'package of work' ...as an .eit as well as a .pdf
- From the 'additional tools', you can use the Viewer Assistant tools (Shade and Spotlight)

The EB485wi will connect not only to your Desktop/Laptop Computer but also to your handheld iOS or Android devices ...using direct HDMI connection or wirelessly

Apps available

Android: <https://play.google.com/store/apps/details?id=com.epson.iprojection&hl=en>

iOS: <https://itunes.apple.com/us/app/epson-iprojection/id488048021?mt=8>


### Annotation Mode

This is used when working on your Desktop applications (such as working with Web Pages, Documents, PDFs, Moodles etc.)



### Whiteboard Mode

This is used when, e.g., developing ideas/brainstorming/recording boardwork ...similar to working with a Flipchart or an ordinary classroom-whiteboard

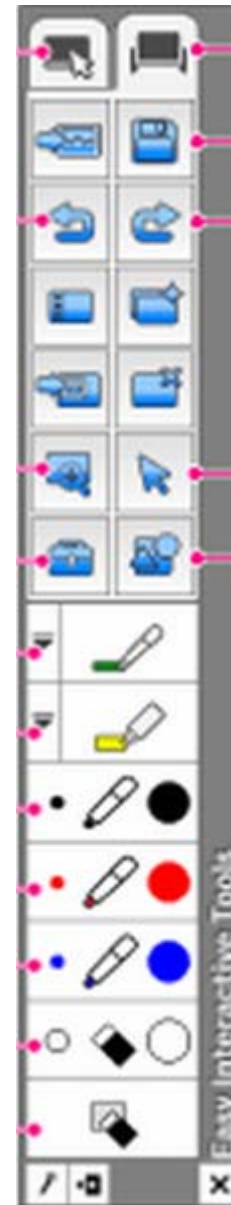

**Annotation Mode**

Mouse

Page Up      Page Down  
 Camera      Keyboard




Annotation	Whiteboard
	Save
Undo	Redo
Magnifier	Select
More Tools	Shapes
	Pen
	Highlighter
	Black Pen
	Red pen
	Blue Pen
	Eraser
	Erase All
Always Show	Hide      Exit


**Whiteboard Mode**

Background



Page List      New Page  
 Insert Image      Delete Page

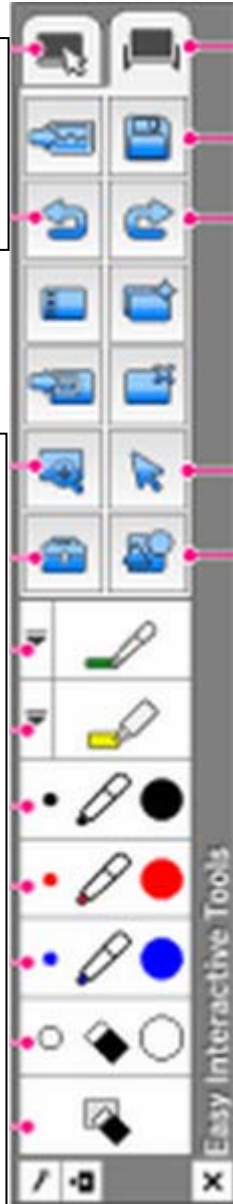

Whiteboard Mode runs as a full screen...

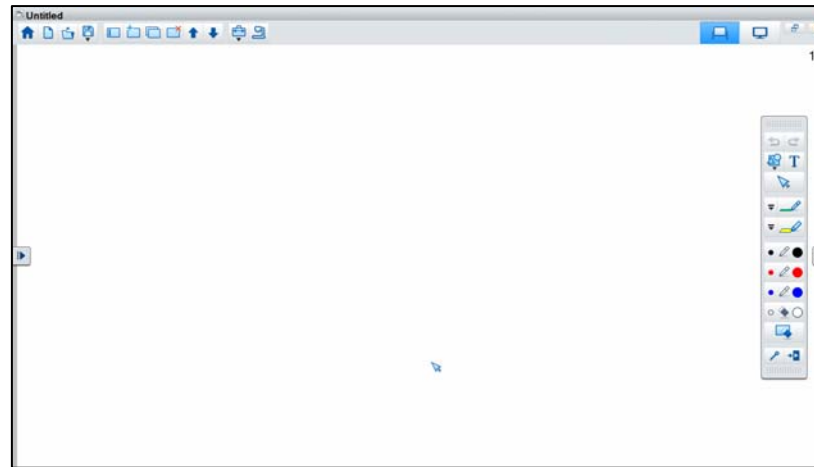

...or,if you click the icon in the top-right, it can run as a smaller/resizeable Window

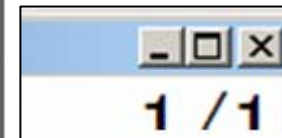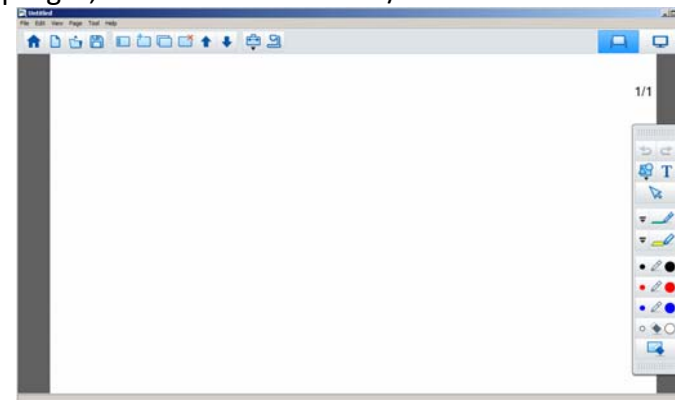

when you then click the Middle/Maximise button in the Top Right corner, Whiteboard Mode reverts to the full screen.

For detailed explanations of each icon, refer to the attached 8-page document "Toolbar Functions.htm" (which is also available to you from 'Other Tools' – 'Help' and is installed at "C:\Program Files\EPSON Projector\Easy Interactive Tools Ver.2\help\EN\index.htm")