


Introductory Notes for the Epson BrightLink485wi Interactive Projector

Observe the cable connections. Locate Remote Control and Interactive Styli

Locate Remote Control functions for On/Off, AV Mute and for Freeze, among others.

Turn on Computer and Projector

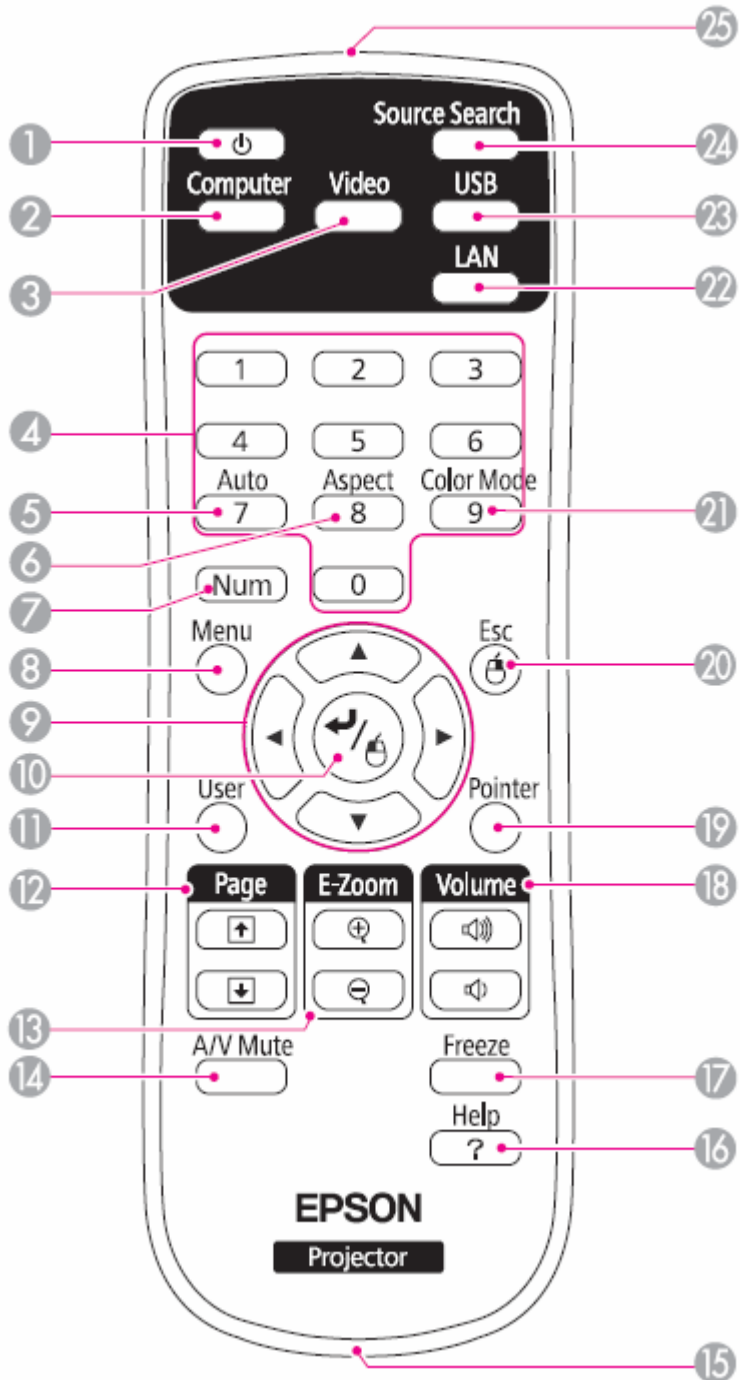

Buttons on Remote Control

- 1. Power On/Off**
2. Computer (1 or 2)
3. Video (S-Video, Video, HDMI)
4. Numbers for Password
5. Auto
6. Aspect
7. Num (used with Numbers)
8. Menu (e.g. Settings - Power – Normal or Eco)
9. Arrows (for Menu ...or as a 'PowerPoint Clicker')
10. Enter OK
11. User (defaults to **AutoCalibration**)
12. Page (for PowerPoint)
13. E-Zoom
- 14. A/V Mute**
15. Strap Attach
16. Help
- 17. Freeze**
18. Volume
19. Pointer on-screen
20. Escape
21. Color (Bright Room etc.)
22. Lan image(s)
23. USB
24. Source
25. Light Emitted

For more explanations of the hardware functions, see pp 16-18 of 165-page EpsonUsersGuide.pdf

(attached and also downloadable from

<http://download.epson.com.sg/manuals/UsersGuide%20Denmark%20Series.pdf>)

Annotation Mode

Mouse

Page Up Page Down
 Camera Keyboard



Annotation	Whiteboard
	Save
Undo	Redo
Magnifier	Select
More Tools	Shapes
	Pen
	Highlighter
	Black Pen
	Red pen
	Blue Pen
	Eraser
	Erase All
Always Show	Hide Exit

Whiteboard Mode

Background

Page List New Page
 Insert Image Delete Page

